



Cleaning



Tablets



Pumps



Ancillaries

# Technical data sheet FC22





**Gel-clear tablets dissolve in the condensate waste water, coating the drains in an antimicrobial protective layer preventing Biofilm formation along the whole dispersive route in any drainage system**

Name	Gel-clear
Product Code	FC22
Packing Qty	Single tablet clamshell blister pk
Tablet appearance	Orange Solid Disc
Tablet dimension	45mm x 14mm

## SPECIAL FEATURES

- Up to 6 months protection
- NSF approved
- Suitable for pumps or gravity drains
- Non-corrosive to metals
- Stops drain blockages
- Prevents biofilms & odours

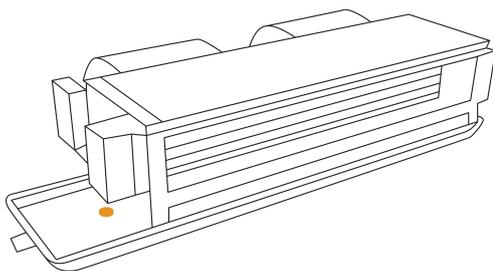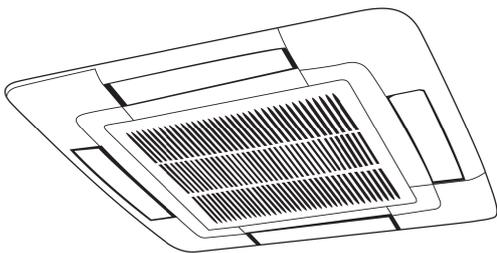

## DESCRIPTION

Gel-clear tablets prevent the formation of biofilms in HVACR drainage systems. Suitable for every type of drainage configuration, Gel-clear tablets reduce breakdowns, and improve drainage efficiency. Using a unique, proprietary coating method, Gel-clear tablets outlast conventional condensate treatments, suiting yearly maintenance programmes.

Gel-clear FC22 tablets are safe & simple to use. Placed in the drain pan, they slowly dissolve, coating all the drains in the 'Gel-clear' antimicrobial shield. Gel-clear tablets are 100% water soluble, suitable for all types of condensate pumps, giving protection to the pump and discharge line, from the effects of biofilm.

User Guide  
QR Code



## DIRECTIONS

For HVAC professional use only.

Place the tablet away from the drain outlet, anywhere between the coil and the drain outlet. It is important only that the tablet comes into contact with the moving water. The tablet will completely dissolve, coating all the drains. The tablet does not have to remain visible, the coating protects the drains, preventing microbial attachment.

## DANGER

Contains; Quaternary ammonium compounds, C12-14-alkyl(ethylphenyl)dimethyl dimethyl, chlorides; Quaternary ammonium compounds, benzyl-C12-18-alkyl(dimethyl, chlorides. H302 - Harmful if swallowed H315 - Causes skin irritation H318 - Causes serious eye damage. P280 - Wear eye protection, face protection, protective gloves. P301+P312 - IF SWALLOWED: Call a POISON CENTRE or doctor if you feel unwell. P302+P352 - IF ON SKIN: Wash with plenty of soap and water. P305+P351+P338 - IF IN EYES: Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. P310 - Immediately call a POISON CENTRE or doctor. P362+P364 - Take off contaminated clothing and wash it before reuse. P501 - Dispose of contents/container to hazardous or special waste collection point, in accordance with local, regional, national and/or international regulation.

